


# Operating Instructions For CABLEVISION Remote Control

UR2-CBL-CV04

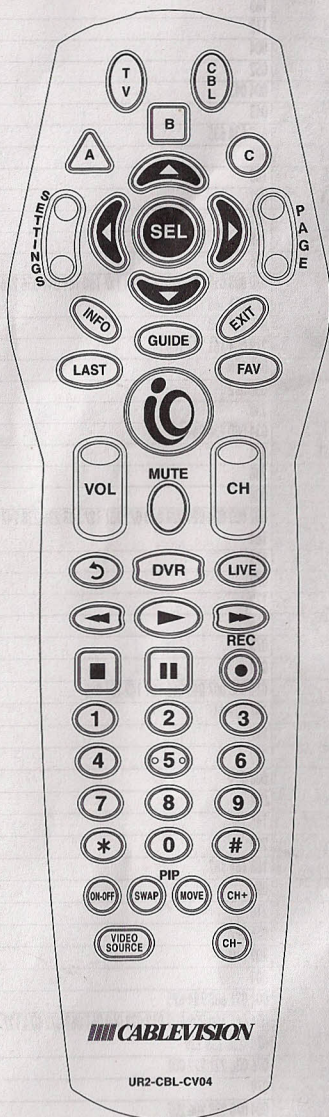

## 1 Introduction

The remote control is designed to operate the Scientific-Atlanta® Explorer 8000, Pioneer Voyager DVR and the Pace Micro DVR Series set top boxes and the majority of TV's on the market.


## 2 Replacing Batteries

Before you program or operate the remote control, you must install two AA alkaline batteries.

**STEP1** Remove the battery compartment cover on the back of your remote control.

**STEP2** Check battery polarity carefully, and install the batteries as shown in the illustration below.

**STEP3** Replace the battery compartment cover.

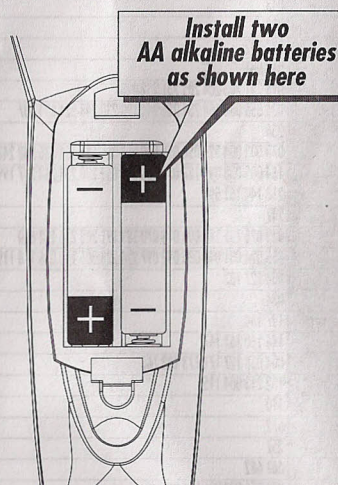

## 4 Operations

### Default State :

Device Default: Scientific-Atlanta® Explorer 8000

Volume Default : TV volume and mute through the TV, with the option of controlling volume and mute through the Cable. Refer to Section D for programming the volume and mute through your Cable.

## 3 Button Functions

### DEVICE KEYS

Allow you to turn on and off your TV and CABLE box. They are also used to setup the remote control.

### FOUR-WAY CURSOR KEYS

Allow you to navigate through the on-screen menus.

### SETTINGS

Displays current cable box settings.

### INFO

Displays channel and program information.

### LAST

Recalls the last channel that was viewed.

### MUTE

Turns volume off.

### VOLUME

Turns the volume up and down.

### DVR

Displays a list of programs that you have recorded, allowing you to select one for viewing.

### REW

Replays the previous few seconds of a program.

### NUMBER KEYS

Allow direct access to specific channels and menu options.

### \*

Reserved for future use.

### PIP ON/OFF

Opens or closes the PIP window.

### VIDEO SOURCE

Selects the video source.

The Scientific-Atlanta® Explorer Converter has an on-screen program guide that can be sorted several different ways:

A : sorts the guide by time

B : sorts the guide by theme

C : sorts the guide by title

Consult your converter manual for more information on the on-screen guide.

### PAGE

Moves the menu forward and backward one page.

### EXIT

Exits out of on-screen menus.

### GUIDE

Displays the program guide listings.

### FAV

Steps through favorite channels.

### iO

Displays the applications menu.

### CH

Changes the channel up and down.

### LIVE

Displays live television programming.

### VOD KEYS

Perform the video-on-Demand functions.

### #

Reserved for future use.

### PIP MOVE

Moves the PIP window to another location on the screen.

### PIP CH▲/▼

Selects the next higher or lower channel in the PIP window.

### PIP SWAP

Swaps the contents of the PIP window and the main viewing screen so that the PIP window displays on the main screen.

**STEP3** Point the remote control toward the TV and enter the three-digit code number assigned to your brand from the code tables.

**\*Tip:** The TV will turn off when the correct three-digit code number has been entered. You can verify you have selected the correct code by pressing the [MUTE] button, the TV should turn on or turn off.

**\*Note:** If there is more than one three-digit number listed for your brand, try one code number at a time until your TV turns off.

**STEP4** Store the three-digit code number by pressing the [TV] button once again. The iO button will blink twice to confirm that the code has been stored.

**\*Note:** Try all the functions on the remote control. If any of the functions do not work as they should, repeat from Step 2 using the next three-digit code number from the same brand list.

## B. Auto Search Method.

If the three-digit code numbers assigned to your brand do not turn off your TV or the code tables do not list your brand, you can use the **Auto Search Method** to find the correct three-digit code number for your TV by the following steps:

**STEP1** Turn on the TV you wish to operate.

**STEP2** Press the [TV] button and the [SEL] button simultaneously for 3 seconds. The iO button will turn on.

**\*Tip:** The iO button will light on for 20 seconds. The next step must be entered while the iO button is on.

**STEP3** Press the [CH▲] or [CH▼] button one step at a time or keep it pressed. The remote will emit a series of Power ON/OFF commands. Release the [CH▲] or [CH▼] button as soon as the TV turns off.

**\*Tip:** You can verify that you selected the correct code by pressing the [MUTE] button. The TV should either turn on or turn off.

**STEP4** Press the [TV] button to store the code. The iO button will blink twice to confirm that the code has been stored.

## C. To Find the Three Digit Code Number That was Stored in the TV.

**STEP1** Press the [TV] button and the [SEL] button simultaneously for 3 seconds.

## 5 Programming the Remote Control.

### A. Three-Digit Code Programming Method.

The remote control can be programmed by pressing in a three digit code number that corresponds to particular manufacturers and brands of TV.

The three-digit code numbers are listed in the code table of the instruction manual.

**STEP1** Turn on the TV you wish to program.

**STEP2** Press the [TV] button and the [SEL] button simultaneously for 3 seconds. The iO button will turn on indicating the unit is ready to be programmed.

**\*Tip:** The iO button will light on for 20 seconds. The next step must be entered while the iO button is on.

Universal Remote Control, Inc.

www.universalremote.com  
OCE-0030A Rev 23(01/20/12)

www.universalremote.com