

User Manual

Speaker 1

6" x 4.25" Page

(Outside Pages)

Using the FM Radio

For best results, set up the antenna before using the radio. Plug the antenna into the antenna port on the back of the speaker. Uncoil the cable and extend with a clear line of sight towards the sky.

Switch to FM mode. A voice will be heard, and the LED screen will display the current FM frequency.

 
Radio functions can be controlled by the buttons on the speaker or remote control.

- Press and hold the [▶]/[SCAN] button on the speaker or the [MEMORY] button on the remote control to start automatically scanning and saving nearby available radio stations. The LED screen will show the scanning progress, and the speaker will return to the first station when finished scanning.
- To manually save channels using the remote control, press the [MEMORY] button on the remote control. The LED screen will blink. Press the [◀] and [▶] buttons to flip through stations, and press [▶] to save.
- Press the [◀]/[TUN-] and [▶]/[TUN+] buttons on the speaker or the [TUN-] and [TUN+] buttons on the remote control to skip between saved stations.
- Press and hold [◀]/[TUN-] and [▶]/[TUN+] buttons on the speaker or the [TUN-] and [TUN+] buttons on the remote control to manually flip through channels.

Using the LED Lights

Press the [LED] button to power the LED lights ON and OFF and switch between LED light modes.

Using the Remote Control

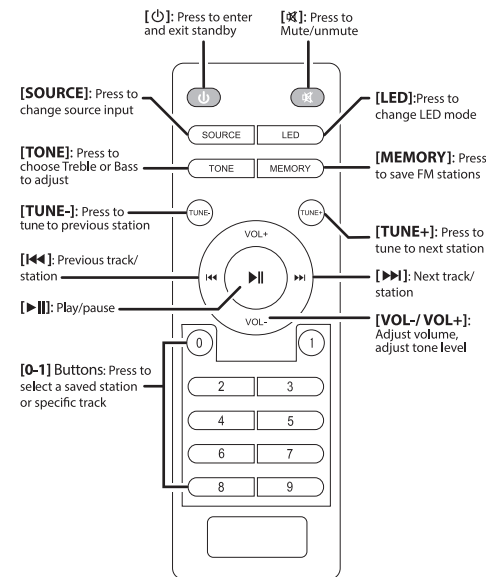

READ CAREFULLY AND KEEP THIS MANUAL

FCC Information
This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure conditions without restriction.

Rating Label Definitions

- Direct current symbol.
- ♻️ This symbol signifies that the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.
- Bluetooth The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Southern Telecom is under license.
- FC This symbol represents FCC Declaration of Conformity and compliance.

DOCUMENT CONCEPTS

Party Speaker

User Manual



(Back Cover)

(Front Cover)

(Inside Pages)

⚠ Caution

To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

- **THIS DEVICE IS NOT A TOY**, do NOT allow children or pets to use or play with this device.
- **Do not disassemble, modify, or repair the device.**
- **Do not submerge in water.**
- Low remote control battery may cause dysfunction.
- Do not expose the unit to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
- Do not allow the USB ports, power jack or other inputs of the device to be exposed to dust, or water, or come into contact with any conductive materials such as liquids, metallic powders, etc.

Questions & Customer Support

 
For questions, troubleshooting or any other assistance, visit our website at SouthernTelecom.com and click on **Product Support**.

In the Box

- **Wireless Speaker** (x1)
- 3.5 mm Auxiliary Cable (x1)
- Antenna Cable (x1)
- Remote Control (x1)
- Instruction Manual (x1)

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND KEEP THIS MANUAL

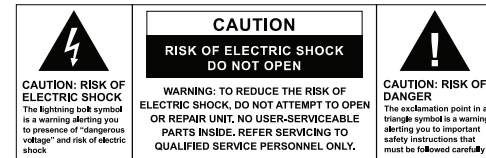

⚠ Warning

 
To reduce risk of electric shock, and to ensure safe and proper use, read all safety information before using the device.

- **THIS IS NOT A TOY**. Please keep away from children and pets.
- Follow all instructions. Heed all warnings.
- For indoor use only.
- Only use with manufacturer-approved accessories, and supplies.
- Do not expose the unit to extreme temperatures (heat or cold), open flames, humid conditions, or wet conditions.
- Keep away from rain and moisture. Do not submerge in water.
- Never operate or handle the product or plug with wet hands.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs convenience receptacles, and the point where they exit from the apparatus.
- Unplug during lightning storms or when unused for long periods of time.
- Do not open or attempt to repair the unit yourself should it not be working.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged or wires are exposed; liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- **WARNING:** The mains plug is used as a disconnect device; the disconnect device shall remain readily operable.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing, and objects filled with liquids, such as vases, shall not be placed on apparatus.

NORTH AMERICAN MODELS WITH POLARIZED PLUGS:

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm, do not use that outlet.

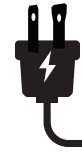


⚠ Caution

- Do not use appliance for other than intended use.
- Do not operate unattended.
- Do NOT put fingers or hands into the product.
- Keep out of reach of children and pets. Children should not be left unsupervised near this product. This unit is not to be used by children or any person(s) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given express supervision and instruction.


Additional Precautions and Warnings

- Always turn off and unplug when not in use or before maintenance.
- Keep away from direct sunlight, heat sources, air conditioners, and fans.
- Always keep on a stable, flat surface. Do NOT place on a carpet, bed, cushion or other non-flat, non-stable surface.
- Never move the product while in use.
- Keep the power cable clear of pathways, and do not forcefully pull or remove from the unit.
- To disconnect, grip plug and pull from wall outlet. Never pull on cord to disconnect.
- If smoke or burning smell is detected, immediately unplug the unit.
- It is recommended, if the product will not be in use for a long period of time, that the product be covered to protect it from exposure to dust.

 Location of Controls

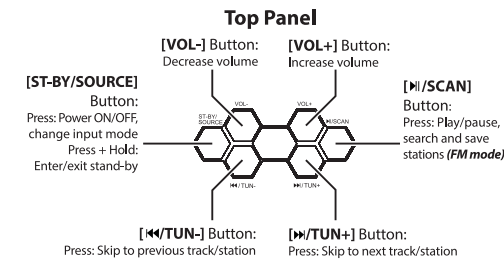

Back Panel

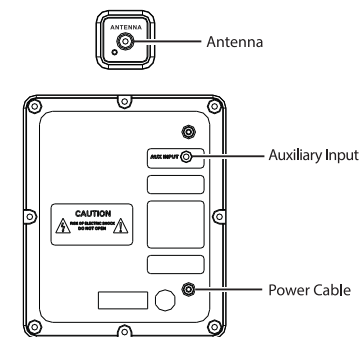 

Powering ON/ OFF

Press the **[ST-BY/SOURCE]** button to power the speaker ON or OFF. When powered ON, the speaker will enter Bluetooth® pairing mode, and will automatically re-pair to any nearby previously-paired device with Bluetooth enabled.

Switching Input Modes

Press the **[ST-BY/SOURCE]** button on the top of the speaker to switch between input modes. The LED screen on the front of the speaker will indicate the mode.

Bluetooth Pairing

1. Power the speaker ON. The speaker will enter Bluetooth pairing mode, and the LED screen will display **"BI18."**
2. Set your mobile device to search for Bluetooth devices. When the list appears, select **Speaker X1** from the list of found devices.
3. Once successfully paired, you will be able to play music through the speaker.

Using the 3.5 mm Auxiliary Input

Insert one connector of the 3.5 mm auxiliary cable into the 3.5 mm auxiliary input jack on the back of the speaker. Insert the other connector into the headphone jack or audio output port of your media-playing device.

Change the input to AUX mode; the LED screen will display the word **"SPKR."**

In AUX mode, playback will be controlled by your connected device.