

# MULLIONS \_ HOW TO PLACE DOORS IN CURTAIN WALLS

NOVEMBER 4, 2012

ARCH 2430


## 1 - LOAD A CURTAIN WALL DOOR FAMILY INTO THE PROJECT

Click on the Insert tab > Click on load family > Click on the door folder > Click to select a curtain wall door



## 2- IF CURTAIN WALL DOOR FAMILY DOES NOT EXIST IN THE LIBRARY

Download one > Click on the insert tab > Use the Autodesk Seek Tool

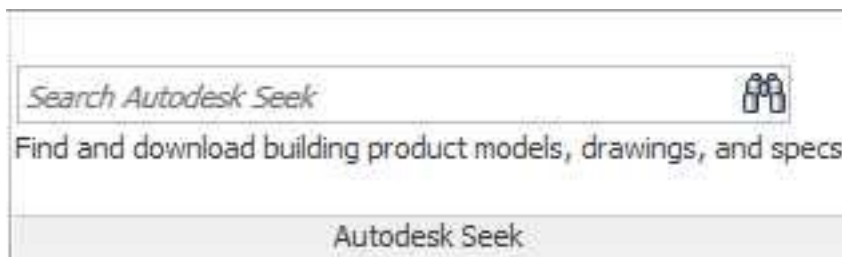

OR build a new one curtain wall panel

## 3 - SELECT THE CURRENT CURTAIN WALL PANEL

Move your mouse to the edge of the panel to be replaced > click to select it (tab as needed) > click the pin



to disassociate that panel with the type properties



## 4 - CHOOSE THE NEW PANEL TYPE

In the properties palette click on the drop down menu to display the curtain panels loaded in the project > Click on the curtain wall door



## 5 - ADJUST GRID LINES AND MULLIONS AS REQUIRED

