


INSTRUCTIONS

STEP1. Find the location where you want to put the carbon monoxide alarm/detector. (I picked the hallway closest to my kitchen and bedrooms.)

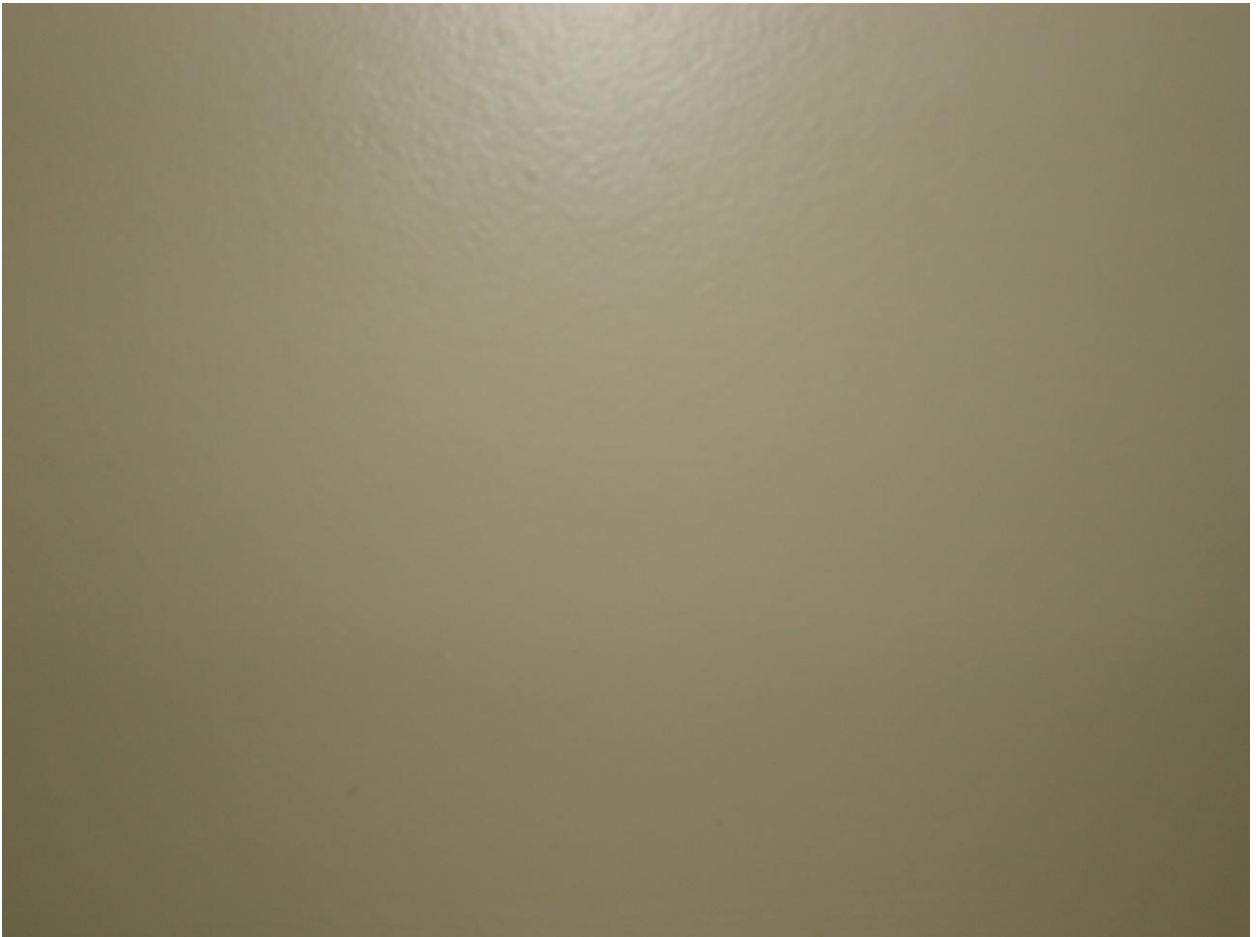


**STEP 2. MEASURE THE WALL BASED ON THE BRACKETS
(MARK 1 IS APPROXIMATELY $\frac{3}{4}$ AND MARK 2 $3 \frac{3}{4}$)**



**STEP 3. USE THE SCREWDRIVER TO INSTALL THE SCREWS
(SCREWS CAME WITH THE CARBON MONOXIDE)**



STEP4. PLACE THE BACK OF THE CARBON MONOXIDE ON THE SCREWS.

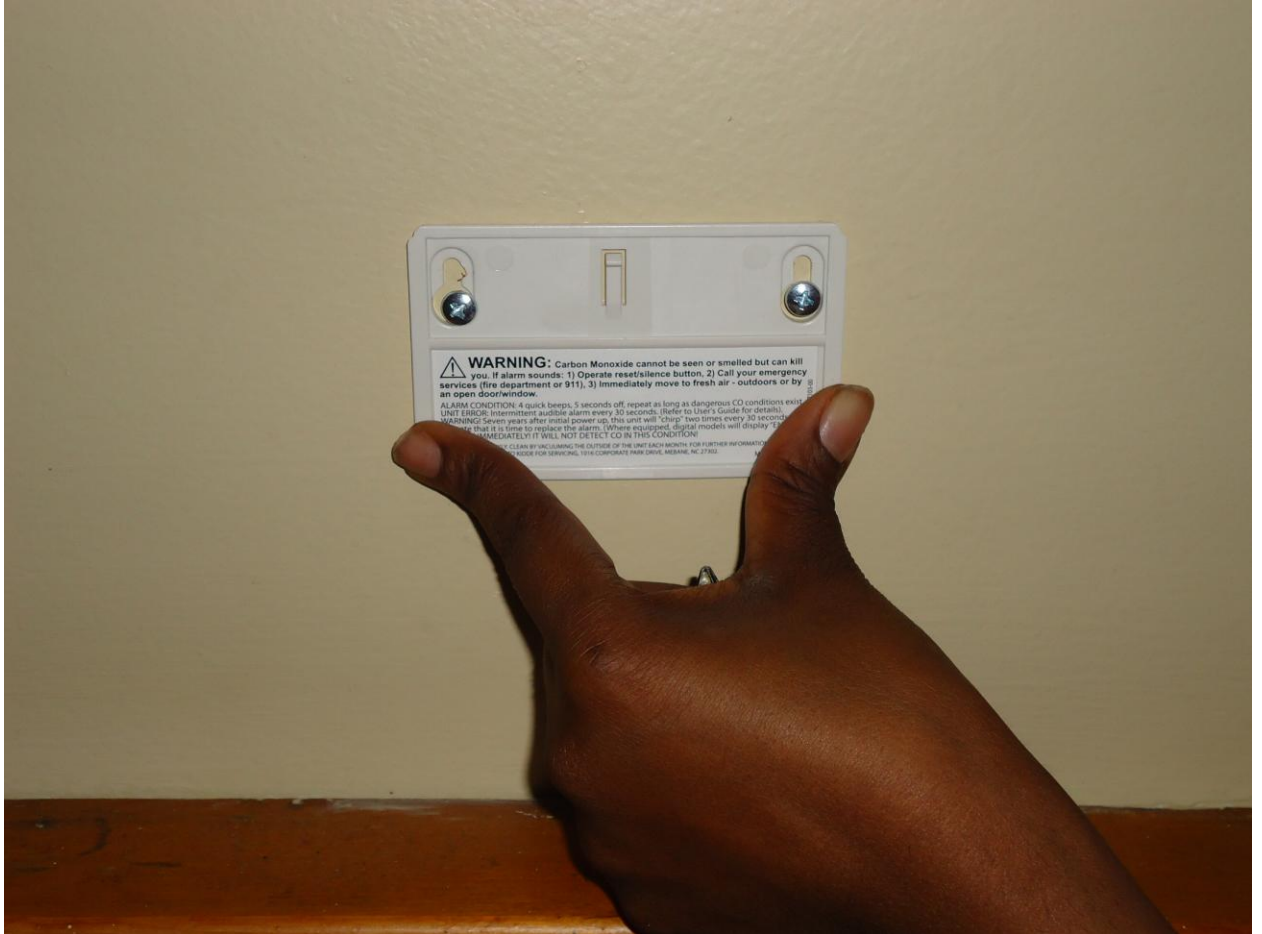

STEP5. TURN THE CARBON MONOXIDE ALARM/DETECTOR AROUND SO YOU COULD SEE THE BACK.




STEP 6. PLACE THE BATTERIES INTO THE BACK OF THE CARBON MONOXIDE ALARM/DETECTOR.



STEP 7. ALIGN THE CARBON MONOXIDE ALARM/DETECTOR TO THE BACK THAT YOU SCREWED INTO THE WALL.



**STEP 8. SLIDE THE CARBON MONOXIDE ALARM/DETECTOR
DOWN ON THE BACK AND THERE YOU HAVE INSTALLED IT!!**

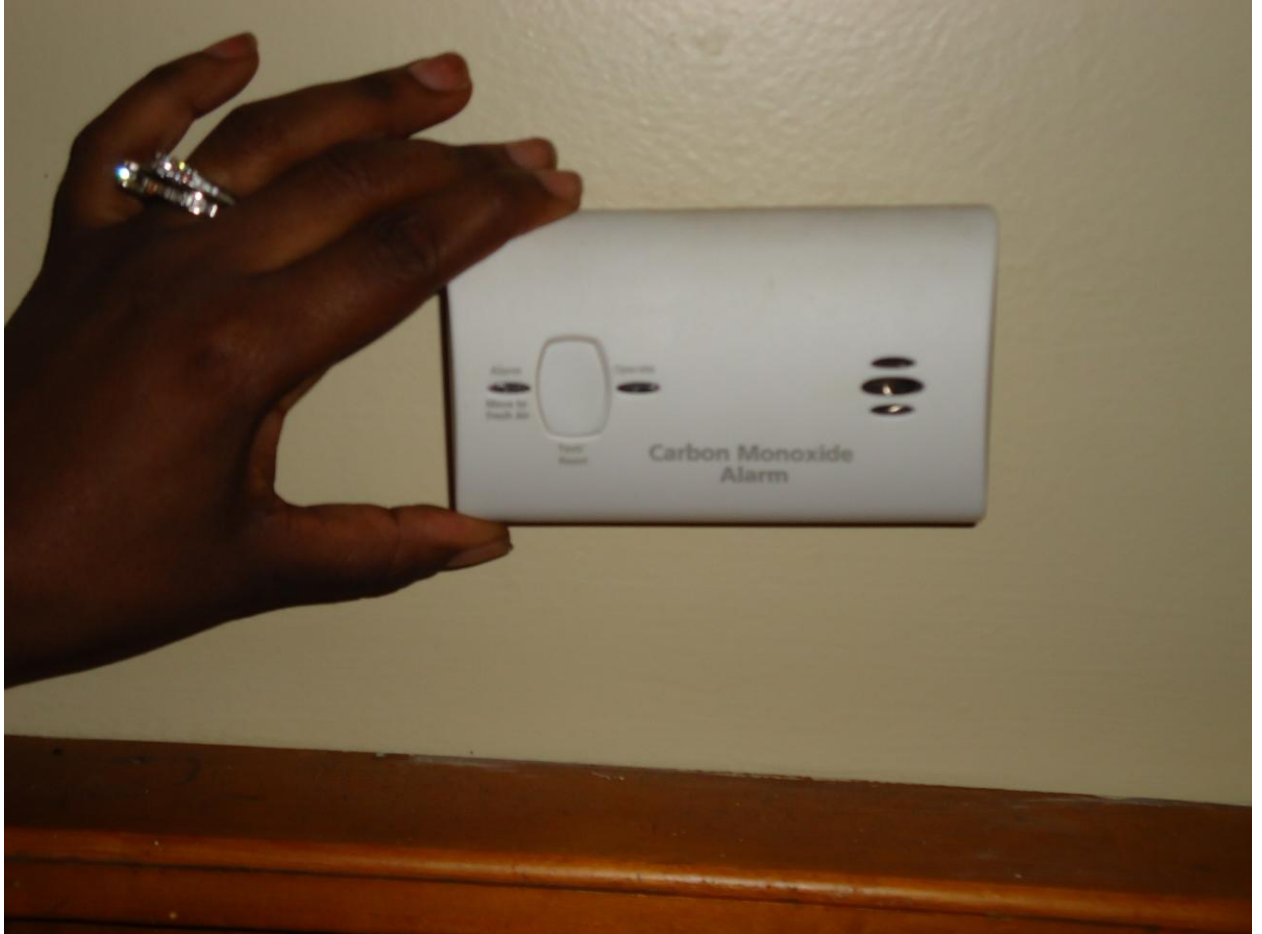

STEP9. PLEASE PRESS THE BUTTON ON THE CARBON MONOXIDE ALARM/DETECTOR TO MAKE SURE THAT IT IS INSTALLED PROPERLY. ENSURE THAT YOU HEAR THREE BEEPS TO KNOW THAT YOU HAVE SUCCESSFULLY INSTALLED THE CARBON MONOXIDE ALARM/DETECTOR. GIVE YOURSELF A TAP ON THE BACK FOR A JOB WELL DONE!!!!!! NOW BE SAFE CAUSE REMEMBER SAFETY FIRST.

