

TOOLS NEEDED


PENCIL- TO MARK THE MEASUREMENT




MEASURING TAPE- TO MEASURE THE SPACE BETWEEN
THE BRACKETS FOR THE SCREW.



SCREW DRIVER

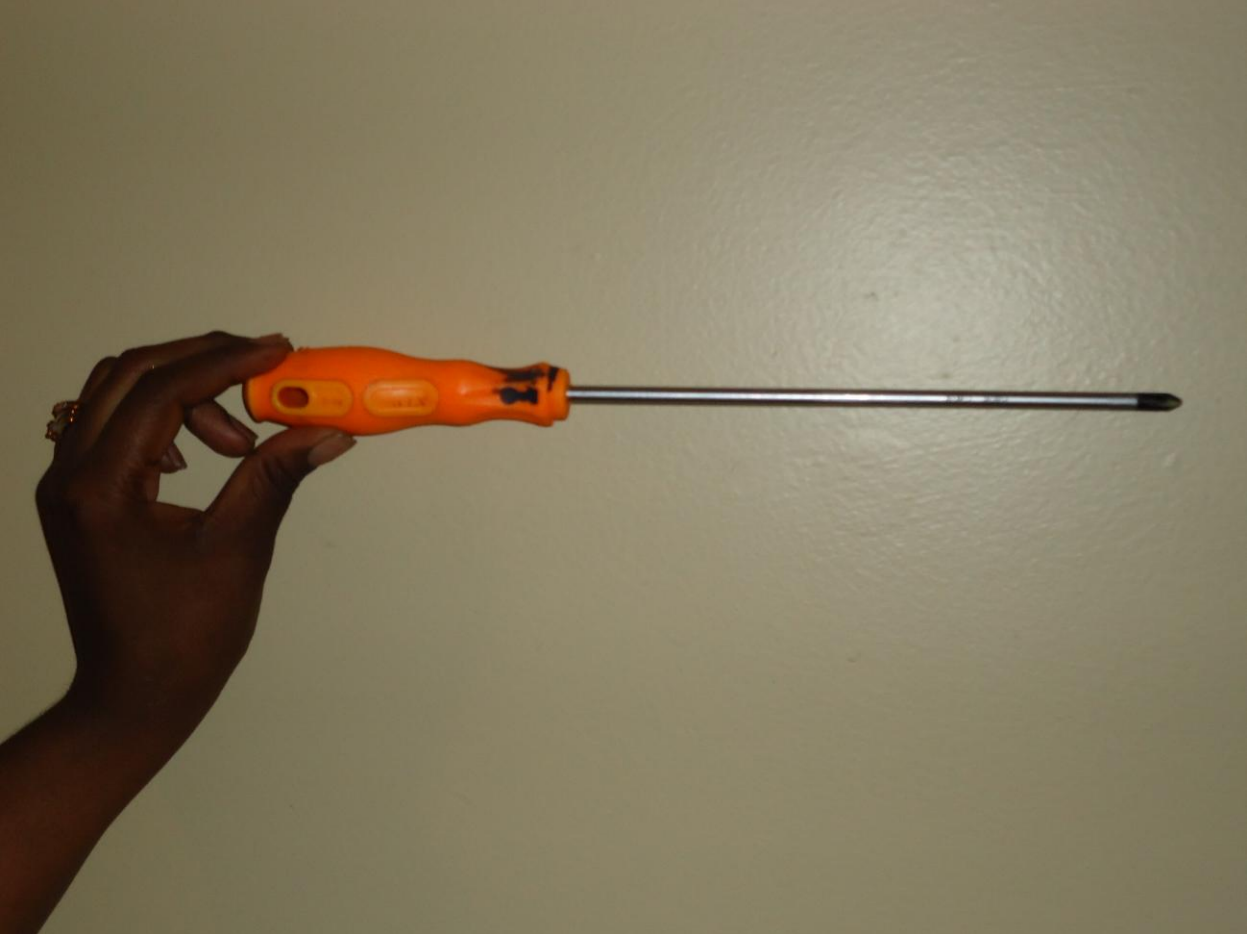

CARBON MONOXIDE ALARM/DETECTOR

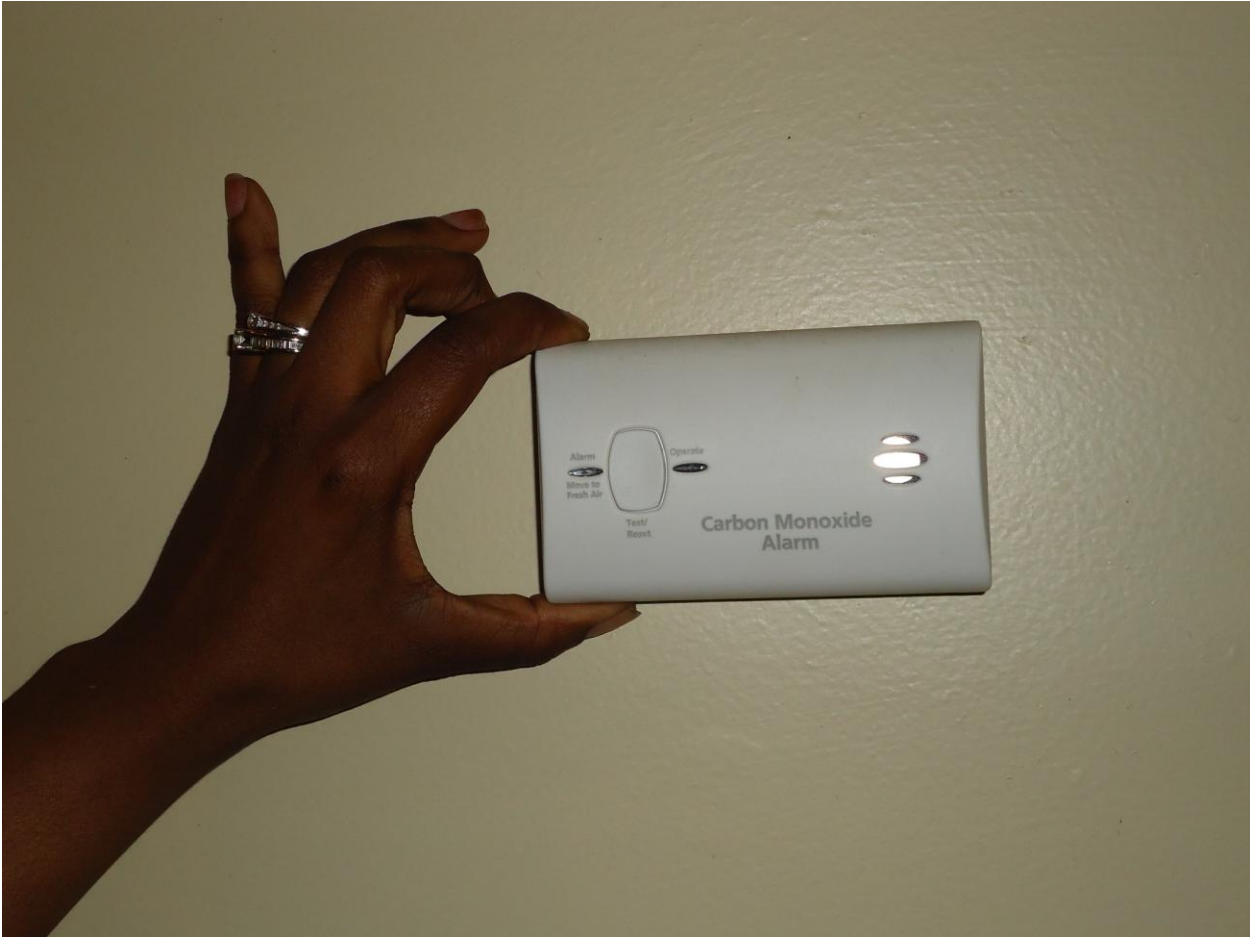

BATTERIES

