


3-A Column Floor Plan
 Bolted together using 2-1/2" Long 1/4" Bolts 3/4"-1'-0"

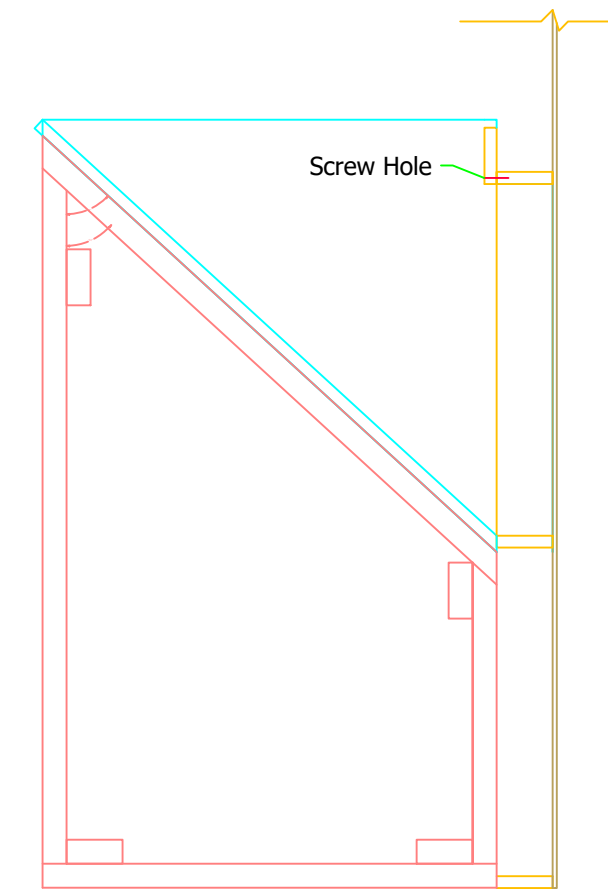

3-B Chute and Column Connection
 screw together using screws 1"=1'-0"

-CONNECT FLATS TOGETHER USING 2-1/2" LONG $\frac{1}{4}$ " BOLTS IN PRE-DRILLED HOLES ABOUT 2FT APART.
 -BOLTS LONGER THAN 2-1/2" REQUIRE FULL THREADING.
 -2" BOLTS POSSIBLE TO USE BUT NOT MEANT FOR LONG TERM USE.
 -CHUTES ARE SCREWED BY THE 1X4 BRACE TO THE FLAT TOGGLE.
 -SCREW HOLES ON CHUTE TO FLOOR OR SURFACE IF DESIRED.

NYC COLLEGE OF TECHNOLOGY	
SUPERTERRANEAN	
COLUMN ASSEMBLY	PLATE No.
DESIGNER: MIMI LIEN	3
DRAFTER: KENET MEJIA	
SCALE: AS NOTED	
DATE: 4/10/2019	
	OF: 1