


ARCH 2431
Building Technology III
Steel Assembly &
Building Information Modeling (BIM) with Revit

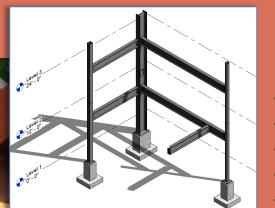

Steel Connections Series

- #1 Introduction to Columns & Beams
- #2 Column Base Plates
- #3 Photos & Videos Connections & Fasteners
- #4 Concrete footing to baseplate connection
- #5 Fin & Splice Plates Notched Beams
- #6 Diagonal Bracing


1.11

Building Technology III Prof. Paul C. King, Course Coordinator Prof. Blake Kurasek

Prof. Justin Sherman


Prof. Jieun Yang

Pking@CityTech.Cuny.Edu Bkurasek@CityTech.Cuny.Edu Jsherman@CityTech.Cuny.Edu Jyang@CityTech.Cuny.Edu

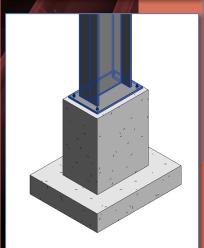


Building Technology III CityTech.CUNY.edu

Steel Connections Detail Development

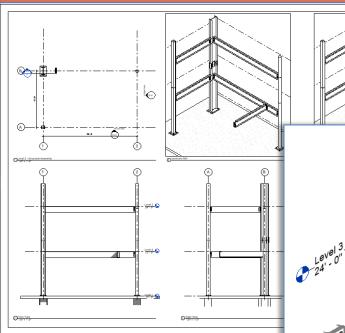

- Base Plate & Footing
- Fin Plate Connection
- Splice Plate Connection
- Notched Beam with Bolting Plate

- <u>22 X 34 Sheet</u>
- <u>Coordinated Views</u> <u>& Isometrics</u>

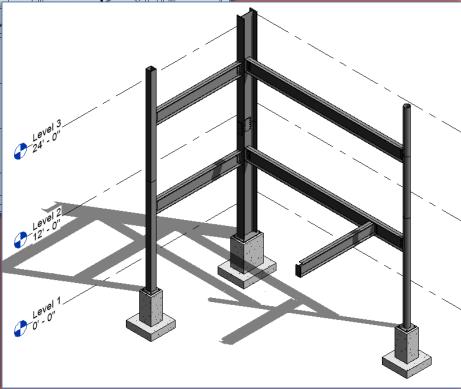

STUDENT NAME HERE

ecture Tit

Connections

Video & sample

Isolated Footing

- Concrete Extrusions
- Cone Shaped Void
- Components
- Threaded Rod
- Nut & Washer
- Concrete

Footing Family

- Add Threaded Rod
- Add Nut
- Add Washers
- Position & Copy
- Steel

Connections

Project File

- Align & Lock Footings to the Columns
- Concrete

Footing Family

- Add Threaded Rod
- Add Level 1 Floor Slab
- Create Section Views &

Develop Details


- Create Section Views
- Provide a good name
- Add Notes & Leaders
- Add Dimensions
- Add to your sheet

Building Technology III


CityTech.CUNY.edu

Concrete Footing to Baseplate Connection

https://www.voutube.com/watch?v=F4Lo5Z_eH9U

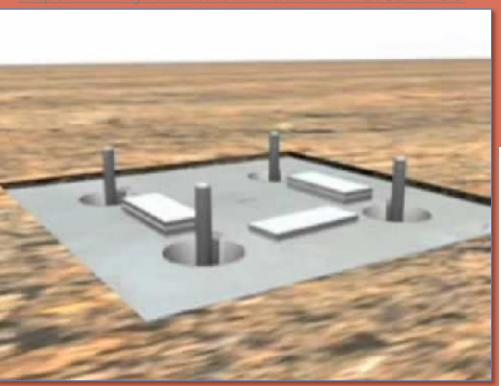

> Watch the Video

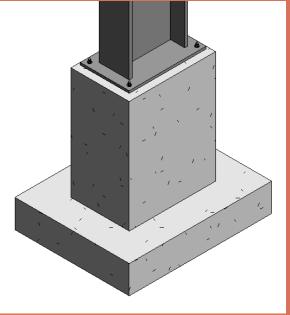

Column Base Plate to Isolate Footing

Lecture Tit

- Connections
- Video & sample
- **Isolated Footin**
-
- Cone Shaped Void
- Components
- Threaded Rod
- Inreaded Rod
 Nut & Washer
- Concrete
- **Footing Family**

Create 8 Reference

Planes

Add Dimensions

Add Parameters

- Add Threaded Rod
- Add Nut
- Add Washers
- Position & Copy
- Steel
- Connections

Project File

- Align & Lock Footings to the Columns
- Concrete

Footing Family


- Add Level 1 Floor Slab
- Develop Details
 - Create Section Views
- Provide a good name
- Add Notes & Leaders
- Add Dimensions
- Add to your sheet


Building Technology III


CityTech.CUNY.edu

Create Concrete Isolated Footing

- Create 8 reference Planes, Add Dimensions & Parameters
 Create > Extrusion (center of footing -4'-0" depth)
- Create > Extrusion (base of footing Start -4', End -5')

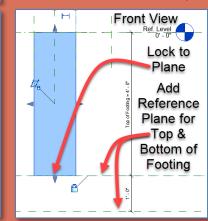

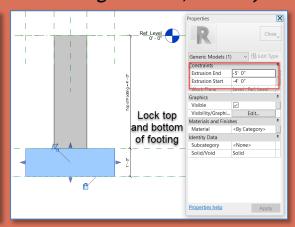

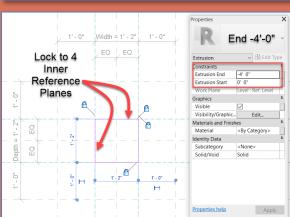



Width = 1' - 2"

EQ

Lock 1'

Dimensions

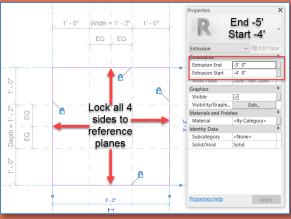

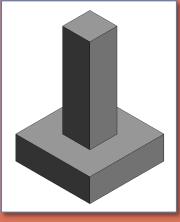

Connections

Isolated Footi

- Components
- Threaded Rod Nut & Washer
- Concrete

Footing Family

- Add Threaded Rod
- Add Nut
- Add Washers
- Position & Copy
- Steel

Connections

Project File

- Align & Lock Footings to the Columns
- Concrete


Footing Family


- Add Level 1 Floor Slab
- Develop Details
 - Create Section Views
- Provide a good name
- Add Notes & Leaders
- Add Dimensions
- Add to your sheet

Building Technology III

CityTech.CUNY.edu


Concrete Isolated Footing with recess for Hold Down Bolts

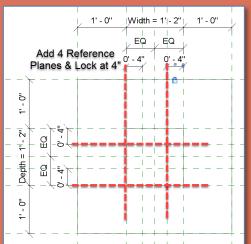


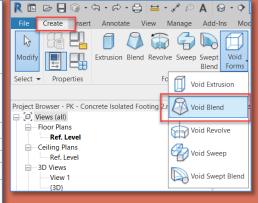






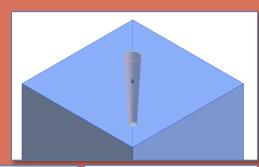

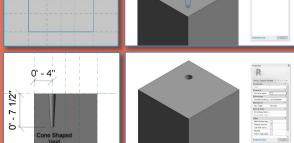

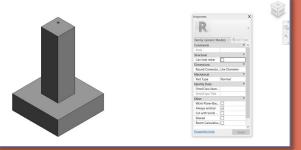

Create Cone Shaped Void

- · Create 4 Reference Planes & Lock at 4"
- Create > Void Blend
 - Top ¾" Radius
 - Base 3/8" Radius
 - First End 0'-0"
 - Second End -7 1/2"

Lecture Title

- Nut & Washer
- Concrete
 - **Footing Family**
 - Add Threaded Rod
 - Add Nut
 - Add Washers
 - Position & Copy
- Steel
- Connections

Project File

- Align & Lock Footings to the Columns
- Concrete


Footing Family


- Add Level 1 Floor Slab
- Develop Details
 - Create Section Views
 - Provide a good name
- Add Notes & Leaders
- Add Dimensions
- Add to your sheet


Building Technology III

Create Threaded Rod, Nut & Washers (import)

- Hold-Down Bolt is made of a threaded rod. nut and washers
- Create > Extrusion (1' rod)
- Transfer Project Standards
- (Copy from your project file)
- · Import Materials Library
- Select "Rod" and set Material Category
- Steel ASTM A992

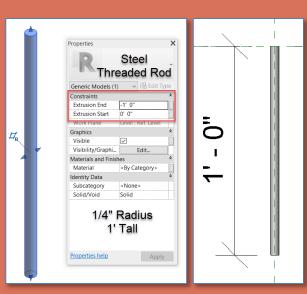

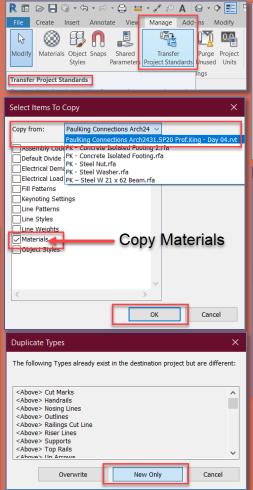

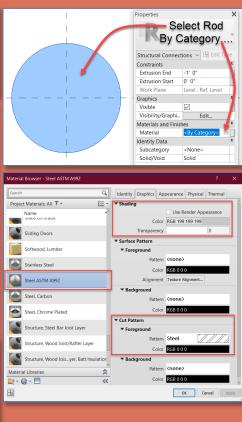

 For all families get in the habit of assigning materials so they render and detail correctly

- Concrete **Footing Family**
 - Add Threaded Rod
 - Add Nut
- Add Washers
- Position & Copy
- Steel
- Connections

Project File

- Align & Lock Footings to the Columns
- Concrete

Footing Family


- Add Level 1 Floor Slab
- Develop Details
 - Create Section Views
- Provide a good name
- Add Notes & Leaders
- Add Dimensions
- Add to your sheet


Building Technology III

CityTech.CUNY.edu


Create Threaded Rod, Nut & Washers (import)


- Because you need more than one of each component, create each in a separate family file then combine these in the concrete footing family
- Steel Nut

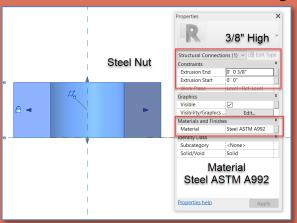

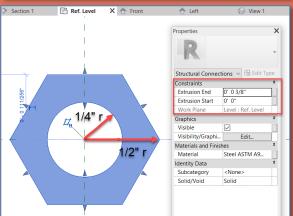


- Steel Washer
- ½" radius with ¼" radius hole x 3/8" high ¾" radius with 5/16" radius hole x 1/8" high

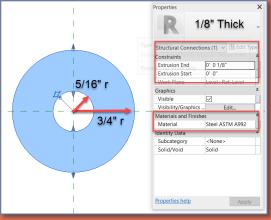

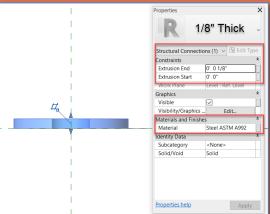



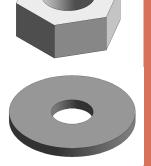



- Steel

Connections

Project File

- Align & Lock Footings to the Columns
- Concrete

Footing Family


- Add Level 1 Floor Slab
- Develop Details
 - Create Section Views
- Provide a good name
- Add Notes & Leaders
- Add Dimensions
- Add to your sheet

Building Technology III

CityTech.CUNY.edu

Assemble Components in Concrete Footing Family

· Load the Threaded Rod, Nut & Washer into the Concrete Footing Family

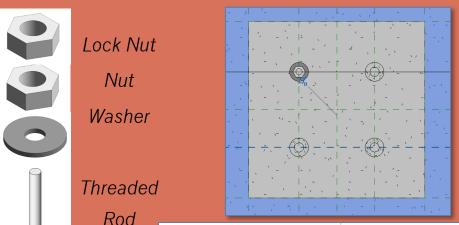

Cone


Shaped


Void

Washer

Nut

- Locate each component and make certain each is locked to the correct reference planes
- Set the material for the footing to concrete, cast -in-place
- Load the Footing Family into the project file.
- All sub families will load as well

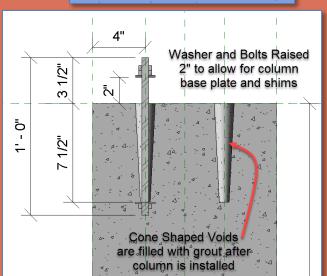

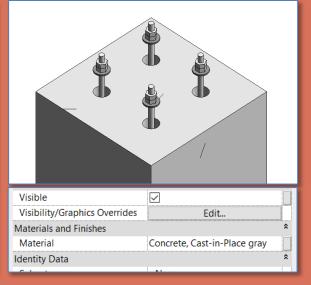

Lecture Titl

- Connections
- Video & sample

Isolated Footin

- Concrete Extrusions
- Cone Shaped Vo

Component

- Threaded Ro
- Nut & Washer
- Concrete

Footing Famil

- Add Threaded Roo
- Add Nut
- Add Wasl
- Position & Copy
- Stee

Connections

Project Fi

- Align & Lock Footing to the Columns
- Concrete


Footing Family


- Add Level 1 Floor Slab
- Develop Details
 - Create Section Views
- Provide a good name
- Add Notes & Leaders
- Add Dimensions
- Add to your sheet

Building Technology III

CityTech.CUNY.edu

Align & Lock the Concrete Footing to the Column

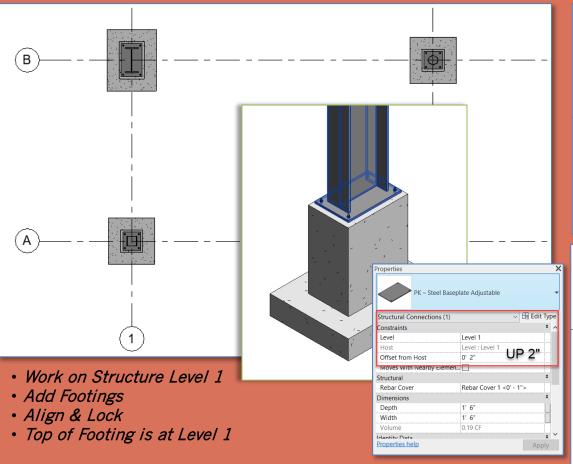

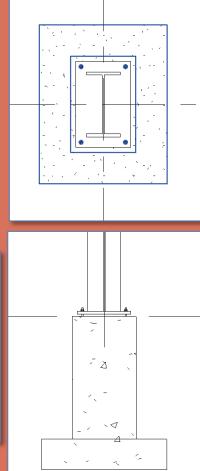

- Base plate of column must be raised 2" to allow for shims and grout
- Column must be 2" shorter (from 15'-0" down to 14'-10")

- Connections


Component

- Develop Details
 - Create Section Views
- Provide a good name
- Add Notes & Leaders
- Add Dimensions
- Add to your sheet

Building Technology III

CityTech.CUNY.edu

Add a Concrete Floor Slab on Level 1 Structural

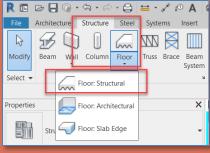


· Create a Structural Floor Select Generic 12"


Concrete Slab 8 inch

• Structure > Thickness = 8" • Material = Concrete

Duplicate >

- Name: Concrete Slab 8 incl Coarse Scale Fill Pattern Black Coarse Scale Fill Color nalytical Properties
- Duplicate... 0.700000 Roughness Cancel
- 15.0210 BTU/°F Thickness = 8" Material = Concrete Thickness Wraps 1 Core Bound Lavers Above Wrap
- Draw Rectangle at each footing. Snap & Lock to the concrete
- Draw Rectangle with 6' offset from grid intersection to grid intersection
- (use space to flip offset direction)
- Add Rectangle at each footing snap & lock to the concrete not the steel

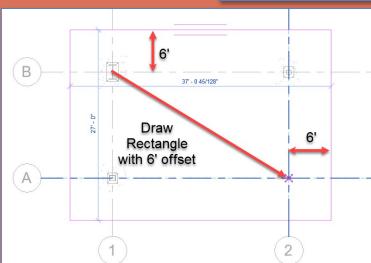


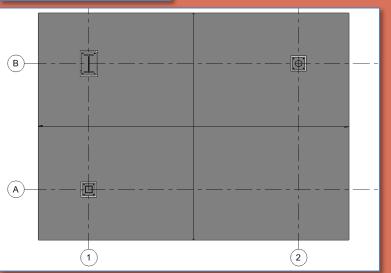


Building Technology III


CityTech.CUNY.edu


Modify Base Plate Elevations as needed – add details

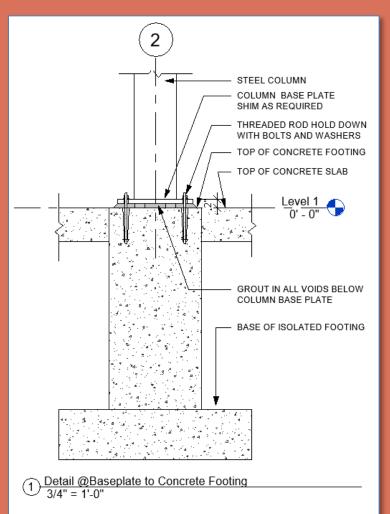

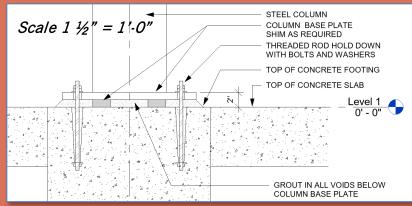

- Develop a detail of the footing condition
- Note the 2" distance from top of plate to concrete
- Top of Footing can also be recessed to allow for finish flooring to cover

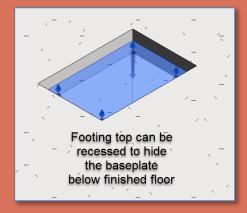

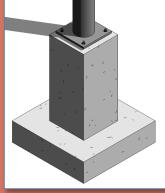

Building Technology III

CityTech.CUNY.edu

Isometric views of Completed Column & Isolated Footings

