



Assemble frame using 2x4 Pine with wood glue and 3" drywall screws. Lid with  $\frac{3}{4}$ " A/C Plywood.

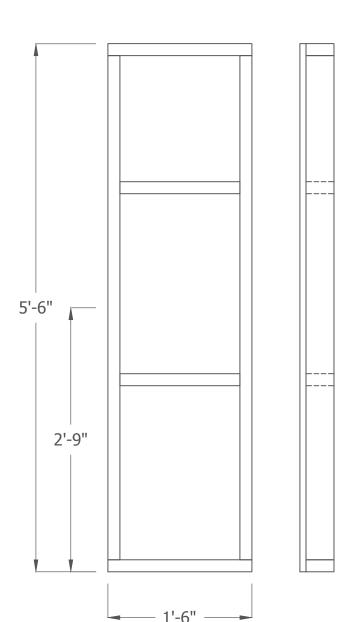

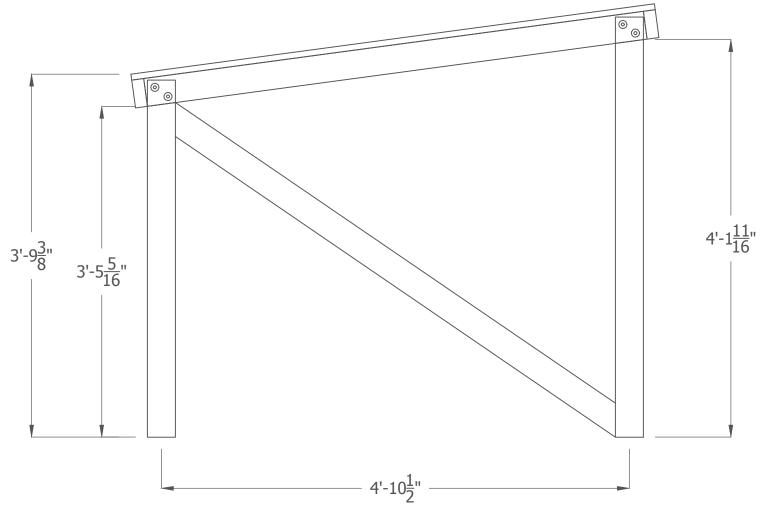

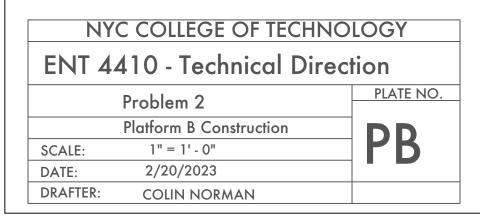

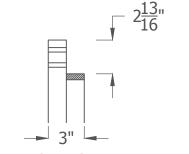

Leg Detail - Elevation View

Assemble step legs using  $2\frac{1}{2}$ " drywall screws and wood glue.

Outer leg has 8° bevel. Pre drill holes for  $\frac{3}{8}$ " hex bolts using  $\frac{1}{16}$ " oversize bit while platform is upside down. Downstage leg should abut rail. Leave  $\frac{1}{4}$ " gap between lid and leg at closest point.